

Installation Manual

WI-I/O 9-L-x Wireless I/O



Document information

Installation Manual WI-I/O 9-L-x Wireless I/O Version 1.6

Weidmuller Inc. contact details

Address > 821 Southlake Blvd., Richmond, VA 23236
Telephone > (800) 849-9343
Fax > (804) 897-4134
Email > support@weidmuller.com
Website > www.weidmuller.com

Copyright

Limited lifetime warranty, disclaimer and limitation of remedies

Weidmuller Inc. products are warranted to be free from manufacturing defects for the “serviceable lifetime” of the product. The “serviceable lifetime” is limited to the availability of electronic components. If the serviceable life is reached in less than three years following the original purchase from Weidmuller Inc., Weidmuller Inc. will replace the product with an equivalent product if an equivalent product is available.

This warranty does not extend to:

- Failures caused by the operation of the equipment outside the particular product's specification, or
- Use of the module not in accordance with this User Manual, or
- Abuse, misuse, neglect or damage by external causes, or
- Repairs, alterations, or modifications undertaken other than by an authorized Service Agent.

Weidmuller Inc.' liability under this warranty is limited to the replacement or repair of the product.

This warranty is in lieu of and exclusive of all other warranties. This warranty does not indemnify the purchaser of products for any consequential claim for damages or loss of operations or profits and Weidmuller Inc. is not liable for any consequential damages or loss of operations or profits resulting from the use of these products. Weidmuller Inc. is not liable for damages, losses, costs, injury or harm incurred as a consequence of any representations, warranties or conditions made by Weidmuller Inc. or its representatives or by any other party, except as expressed solely in this document.

Contents

Contents	3
About this document	6
Installing your unit	7
Unit components and connections	8
Transmitter unit	8
Receiver unit	10
Installing the antenna	12
Supported antennas	12
Radio transmission distances	14
Installing and earthing antennas	15
Dipole and collinear antennas	16
Dipole antennas	16
Collinear antennas	16
Yagi antennas	18
Installing the power supply	20
Inputs and outputs	21
Digital inputs	22
Relay outputs	23
Status outputs	24
Analog input	25
Thermocouple input	28
Pulse input	29
Analog output	30
Installing and configuring the unit	32
Installing the unit	33
Configuring your units	34
Testing your units	35
Unit specifications	36
Transmitter unit	36
Receiver unit	36
Ancillary hardware reference information	37
RS232 serial cable	37
Index	38

This page intentionally left blank.

Safety information

Thank you for selecting the WI-I/O 9-L-x for your telemetry needs. We trust it will give you many years of valuable service. To ensure your WI-I/O 9-L-x enjoys a long life, double-check **ALL** your connections with the ***Installation Guide*** before powering on the module.

WARNING: Incorrect termination of supply wires may cause internal damage and will void warranty.

Exposure to RF energy is an important safety consideration. The FCC has adopted a safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated equipment as a result of its actions in Docket 93-62 and OET Bulletin 65 Edition 97-01.

FCC Notice when used in USA: WI-I/O 9-x Wireless I/O Module

Part	Additional information
15	This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part15 of the FCC rules (Code of Federal Regulations 47CFR Part 15). Operation is subject to the condition that this device does not cause harmful interference.
90	This device has been type accepted for operation by the FCC in accordance with Part90 of the FCC rules (47CFR Part 90). See the label on the unit for the specific FCC ID and any other certification designations.

Industry Canada: WI-I/O 9-x Wireless I/O Module

RSS-119 - This device has been type accepted for operation by Industry Canada in accordance with RSS-119 of the Industry Canada rules. See the label on the unit for the specific Industry Canada certification number and any other certification designations.

NOTE: Any changes or modifications not expressly approved by Weidmuller Inc. P/L could void the user’s authority to operate this equipment.

To operate this equipment legally the user must obtain a radio-operating license from the government agency. This is done so the government can coordinate radio users in order to minimize interference.

Safety information - FCC Notice

This device complies with Part 15.247 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference; and
- This device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment is suitable for use in Class 1 Division 2 groups A, B and C or non-hazardous locations only.

IMPORTANT ELECTRICAL SAFETY INFORMATION

In order to comply with Electrical Safety Regulations, this module must be installed in an Electrical AND Fire enclosure. This enclosure may be a single or multiple enclosures. Access to the module is to be made by a Service Person only.

About this document

This document is the *WI-I/O 9-L-x Wireless I/O Installation Manual* that describes how to install your WI-I/O 9-L-x units and contains important information for installing your units with other equipment.

Note

If your network only contains one transmitter and receiver pair, you should also read the WI-I/O 9-L-x QuickStart Guides.

This document contains the following sections:

Section	Read this section if you want to ...
Basic steps for using your unit	Learn the basic steps for installing and using your unit.
Factory default configuration	Understand how the transmitter sends information to the receiver.
Unit components	Understand the different parts of your unit.
Antenna installation	Learn how to install an antenna with your unit.
Resetting factory defaults	Reset your unit to the original factory default settings.
Linking transmitter and receiver units	Link your units to work as a dedicated pair.
Safety information	Understand important safety information related to your unit. NOTE: You must read this information before installing your unit.
Specifications	Know technical information about your unit.

For more information, see the next sections.

Installing your unit

This section describes how to install your unit and contains the following sections:

Step	Description	For more information, see ...
1 – Read the safety information	Lets you understand important safety information related to your unit. NOTE: You must read this information before installing your unit.	Safety information on page 5.
2 – Get to know the unit features	Understand the basic features of your unit.	Unit components and connections on page 8.
3 – Install the antenna	Learn how to install an antenna with your unit.	Installing the antenna on page 12.
4 – Install the power supply	Learn how to install a power supply for your unit.	Installing the power supply on page 20.
5 – Install the units	Learn how to install your unit.	Installing the unit on page 33.
6 – Linking and configuring the unit	Learn how to link and configure your units to transmit and receive information.	Configuring your units on page 34.
7 – Test the unit	Understand the principles for testing your units.	Testing your units on page 35.

Note

To ensure internal surge protection works correctly, you must earth each unit using the Earth terminal.


For more information, see the next sections.

Unit components and connections


This section shows the components and terminal connections for the transmitter and receiver units.

Transmitter unit


Your transmitter unit has the following components and terminal connections:

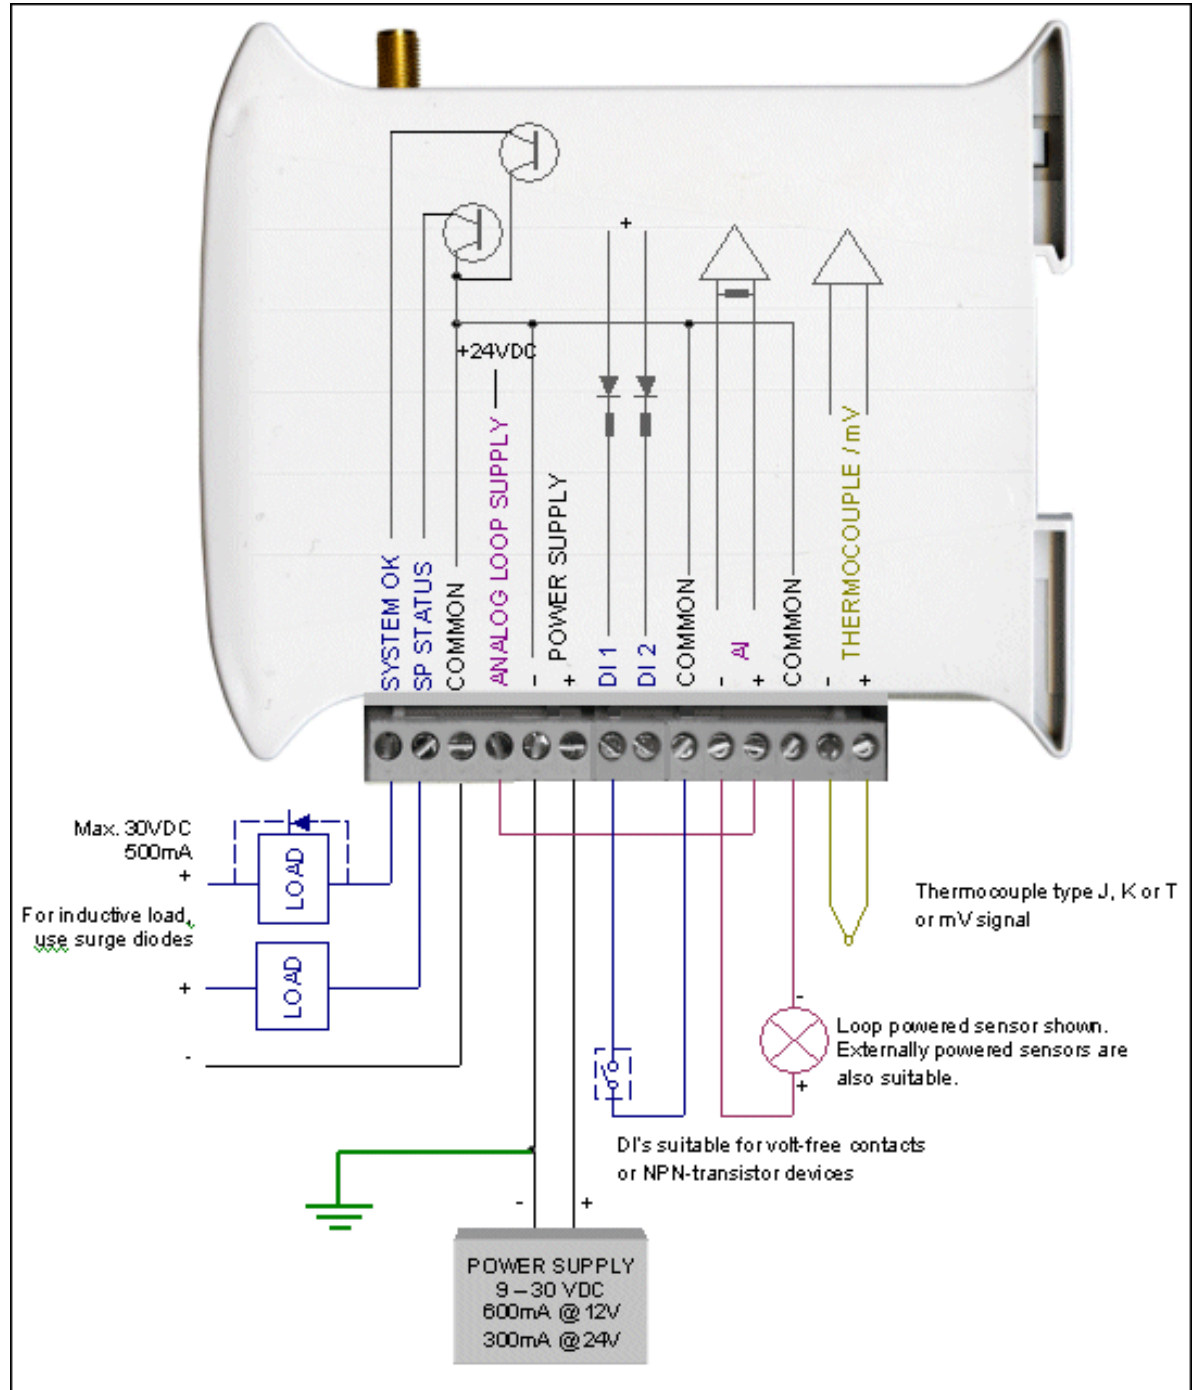

The front panel contains the following components:

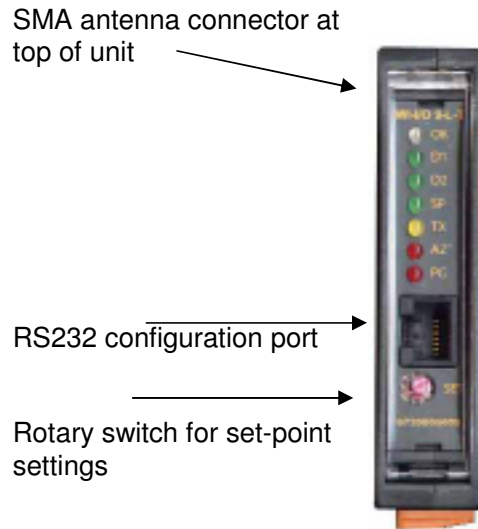

The triangle on the rotary switch indicates the current position, for example:

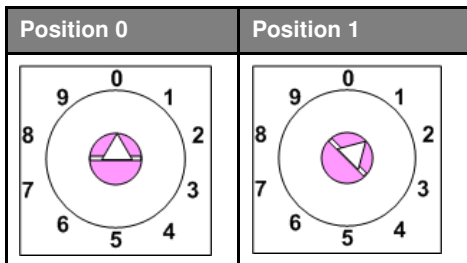


NOTE: To avoid damaging the rotary switch, use a screwdriver to change the position.

The rotary switch controls the setpoint levels on the Analog and Thermocouple inputs. The LEDs on the front panel indicate the unit status:


LED Status	Indicates	
None	No power supply.	
OK LED Green	Current status of the unit OK.	
OK LED Red	Fault condition detected in unit.	
TX Led Flashes	Transmitting Message.	
PG LED on	Configuration Cable Connected.	
Input LED ON	Input LEDs (i.e. D1, D2, SP, AZ,) light when the corresponding input is active.	
	D1	Digital Input 1 is active (Low).
	D2	Digital Input 2 is active.
	SP	Analog Setpoint is active.
	AZ	Analog Input is zero mA
All LEDs medium flash	Medium speed flash (1.6HZ) indicates the module is halfway through the configuration process. Medium flash also happens when you set the rotary switch to position 0 when powering on the unit.	

Receiver unit

Your WI-I/O 9-L-x unit has the following components and terminal connections:

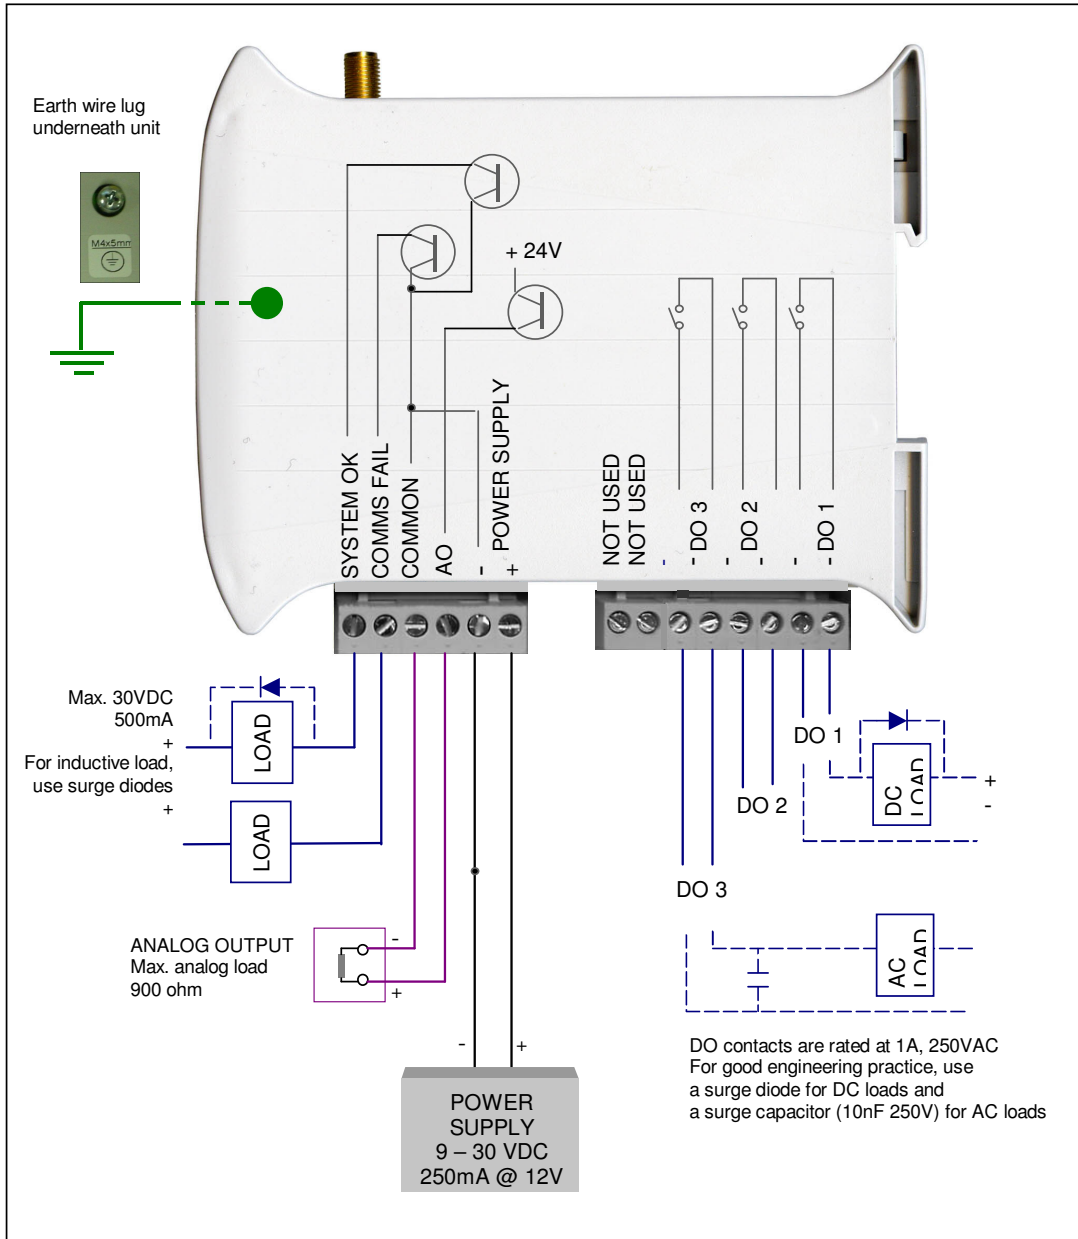

The front panel contains the following components:

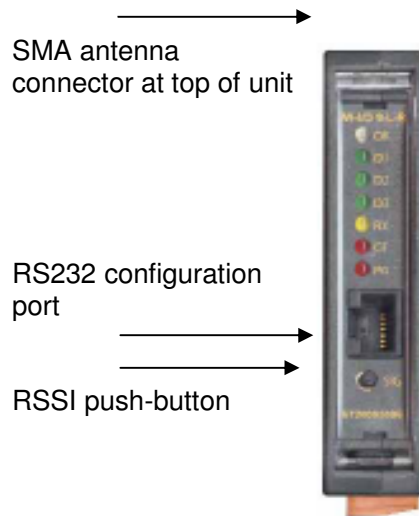

The LEDs on the front panel indicate the unit status:

LED Status	Indicates			
None	No power supply.			
OK LED Green	Current status of the unit OK.			
OK LED Red	Fault condition detected in unit.			
RX Led Flashes	Receiving Message.			
CF Led ON	Module Communication Failure Output is active.			
PG LED on	Configuration Cable Connected.			
Output LED ON	The Output LEDs (i.e. D1, D2, D3) light when the corresponding output is active.			
	D1	Relay output D1 is ON (Contact Closed).		
	D2	Relay Output D2 is ON.		
	D3	Relay Output D3 is ON.		
LEDs with RSSI Push Button Pressed	When you press the RSSI push button, the unit shows the signal strength by lighting the LEDs from the bottom to the top. Signal strength is the strength of the last message received that was addressed to this station.			
	LED	Signal Strength	LED	Signal Strength
	D1	More than -85 dBm	RX	More than -100 dBm
	D2	More than -90 dBm	CF	More than -105 dBm
	D3	More than -95 dBm	PG	Always on during RSSI test
Output LED flashing quickly	If an output is in communication failure, the corresponding LED flashes at 5 Hz.			
	D1	Relay Output D1 is in communication failure.		
	D2	Relay Output D2 is in communication failure.		
	D3	Relay Output D3 is in communication failure.		
	PG	Analog output is in communications failure.		

Installing the antenna

This section explains how to install your antenna and contains the following sections:

Section	Description	For more information, see ...
Supported antennas and cables	Details the antennas and cables you can use with the units.	Supported antennas on page 12.
Radio transmission distances	Details the distances for reliable operation.	Radio transmission distances on page 14.
Installing and earthing antennas	Details important information about installing and earthing antennas.	Installing and earthing antennas on page 15
Dipole and collinear antennas	Details important information about using dipole and collinear antennas.	Dipole and collinear antennas on page 16.
Yagi antennas	Details important information about using Yagi antennas.	Yagi antennas on page 18.

For more information, see the next sections.

Supported antennas

You can use the following antennas with the units:

Antenna	Additional information	Total gain (including cable)
WI-ANT-DEMO-900	Whip antenna for mounting directly onto the module - operation up to ½ mile (1 km).	-6 dBi
WI-ANT-DPL-0-16	0 dBi Dipole antenna with 15' of Cellfoil cable and SMA connector.	0 dBi
WI-ANT-CLR-900-5-32	5dBi Collinear omni-directional antenna with N-type connector.	5 dBi
WI-ANT-CLR-900-8-54	8dBi Collinear omni-directional antenna with N-type connector.	8 dBi
WI-ANT-YGI-10-6	10dBi Yagi directional antenna with N-type connector.	10 dBi
WI-ANT-YGI-15-16	15dBi Yagi directional antenna with N-type connector.	15 dBi

You can use the following cables with the units:

The following table shows compatible cables for different antennas when used with the WI-I/O 9-L-T:

Antenna	North America	Australia/NZ
WI-ANT-CLR-900-5-32	Any cable.	WI-CCSMA-N-33 or WI-CCSMA-N-66
WI-ANT-YGI-10-6	Any cable.	WI-CCSMA-N-66
WI-ANT-YGI-10-6	WI-CCSMA-N-66	External cable with loss > 9dB.
WI-ANT-YGI-15-16	External cable with loss > 9dB.	External cable with loss > 15 dB

You must carefully select antennas for WI-I/O 9-L-T modules to avoid contravening the maximum power limit on the unlicensed channel. The net gain of the antenna/cable configuration should be no more than 6dB in North America (USA, Canada, Mexico) and no more than 0 dB in Australia / New Zealand.

Note

The net gain of an antenna/cable configuration is the gain of the antenna (in dBi) less the loss in the coaxial cable (in dB).

For example, an WI-ANT-CLR-900-8-54 antenna with a WI-CCSMA-N-66 cable has a net gain of 2dB (i.e. +8 dB – 6 dB) at 900 MHz.

The WI-I/O 9-L-R module has no limitation on antenna gain, as this module does not incorporate a radio transmitter.

The following table details the gains of some typical antennas:

Antenna	Gain (dBi)
Dipole with integral 3m cable	0
Dipole without cable	2
5dBi Collinear (3dBd)	5
8dBi Collinear (6dBd)	8
3 element Yagi	5
6 element Yagi	10

The following table details losses for typical cables:

Cable	Loss (dB per 10m) at 900 MHz
RG58	-5
RG213	-2.5
Cellfoil	-3

Radio transmission distances

The unit will operate reliably over large distances depending on the:

- Antenna type;
- Antenna location;
- Amount of radio interference; and
- **Radio path obstructions** (e.g. hills or trees).

Typical reliable distances are:

Area	Distance	Additional information
USA/Canada	20+ miles	6dB net gain antenna configuration permitted (4W Equivalent RF power permitted).
Australia/NZ	20+ km	Unity gain antenna configuration (1W Equivalent RF power permitted).

To achieve these distance, you must elevate at least one site on a hill or transmission tower.

Modules will operate reliably with some radio path obstruction; however obstructions also reduce the reliable distance.

Note

You must test all obstructed paths to check the reliability of the path.

You can achieve maximum transmission distances if the radio path has “line of sight”. For example, raising antennas above intermediate obstructions including hills, trees, etc. Obstructions reduce the range; however they may not prevent a reliable path.

The closer the obstruction is to the antenna, the greater the blocking effect. For example, a group of trees around the antenna is a larger obstruction than a group of trees further away from the antenna. You can achieve longer distances by mounting one antenna on top of a hill.

Note

Due to the earth’s curvature, you must elevate antennas higher than the ground level between the antennas for longer paths (greater than 3 miles / 5 km).

The unit can tolerate larger amounts of obstructions for shorter distances. For very short distances, you can also mount the antennas inside buildings.

If two WI-I/O 9-x modules cannot communicate reliably, you can use a third WI-I/O 9-x module as a “repeater” to receive and re-transmit messages. This module may also have input/output (I/O) signals connected to it and form part of the I/O network.

Note

1. Weidmuller Inc. recommends using the WI-GTWY-9-xxx module as a repeater unit between WI-I/O 9-L-T and WI-I/O 9-L-R modules.
2. To use a repeater unit, the WI-I/O 9-L-x modules and the repeater module must be configured using the supplied configuration software. The factory default configuration described in the Quick Start Guide cannot use a repeater unit.

Installing and earthing antennas

You must connect an antenna to each WI-I/O 9-x module using the SMA connector at the top of the enclosure.

Weidmuller Inc. recommends carefully taping the connections between the antenna and coaxial cable to prevent moisture ingress. Moisture ingress in the coaxial cable is a common cause of radio system problem as it greatly increases the radio losses.

Weidmuller Inc. recommends taping the connection with three layers of tape:

Layer	Tape
1	PVC tape.
2	Vulcanising tape (e.g. 3M 23 tape).
3	Additional layer of PVC UV-stabilized insulating tape.

The first tape layer lets you easily inspect the joint if required as you can easily remove the vulcanising seal.

Note

You must effectively earth all masts for mast-mounted antennas to avoid lightning surges. We also recommend using a coaxial surge diverter for antennas mounted outside industrial plant environments.

If the antenna is not already shielded from lightning strike by an adjacent earthed structure, you can provide shielding by installing a lightning rod above the antenna.

You should connect the antenna to the module using 50 ohm coaxial cable (e.g. RG58 or RG213) terminated with a male coaxial connector. The higher the antenna is mounted, the greater the transmission range; however as the length of coaxial cable increases so do cable losses. For use on unlicensed frequency channels, there are several types of antenna suitable for use.

If you mount antennas on elevated masts, you should effectively earth the masts to avoid lightning surges. The WI-I/O 9-L-x radios are fitted with surge protection.

Note

For high lightning risk areas, Weidmuller Inc. recommends additional surge suppression devices. If the antenna is not already shielded from lightning strike by an adjacent earthed structure, you can install a lightning rod to provide shielding.

Dipole and collinear antennas

This section contains important information for using dipole and collinear antennas. For more information, see the next sections.

Dipole antennas

Unity gain dipole antennas are commonly used on unlicensed channels. The dipole antenna does not provide any gain, so the power transmitted from the antenna is the same as the power out of the module.

A dipole antenna that comes supplied with integral 15 ft cable does not require additional coaxial cable.

You should mount dipole antennas vertically, preferably no less than 1 metre away from a wall or mast for maximum performance.

Collinear antennas

Collinear antennas transmit the same amount of radio power in all directions horizontally, and are easy to install and use. They provide gain by compressing the radiated signal to a flattened disc shape, and reducing the amount of signal radiated above and below the horizontal plane.

Collinear antennas are generally used at a central site with more than one remote site, or at a repeater site.


Collinear antennas are similar in appearance to dipole antennas; however the antenna is longer.

Collinear antennas are supplied without cable, and require additional coaxial cable.

You can use collinear antennas to:

- **Transmitter** – to compensate for the losses in long lengths of coaxial cable.
- **Receiver** – to increase receive sensitivity.

The following diagrams shows the recommended installation for collinear and dipole antennas:

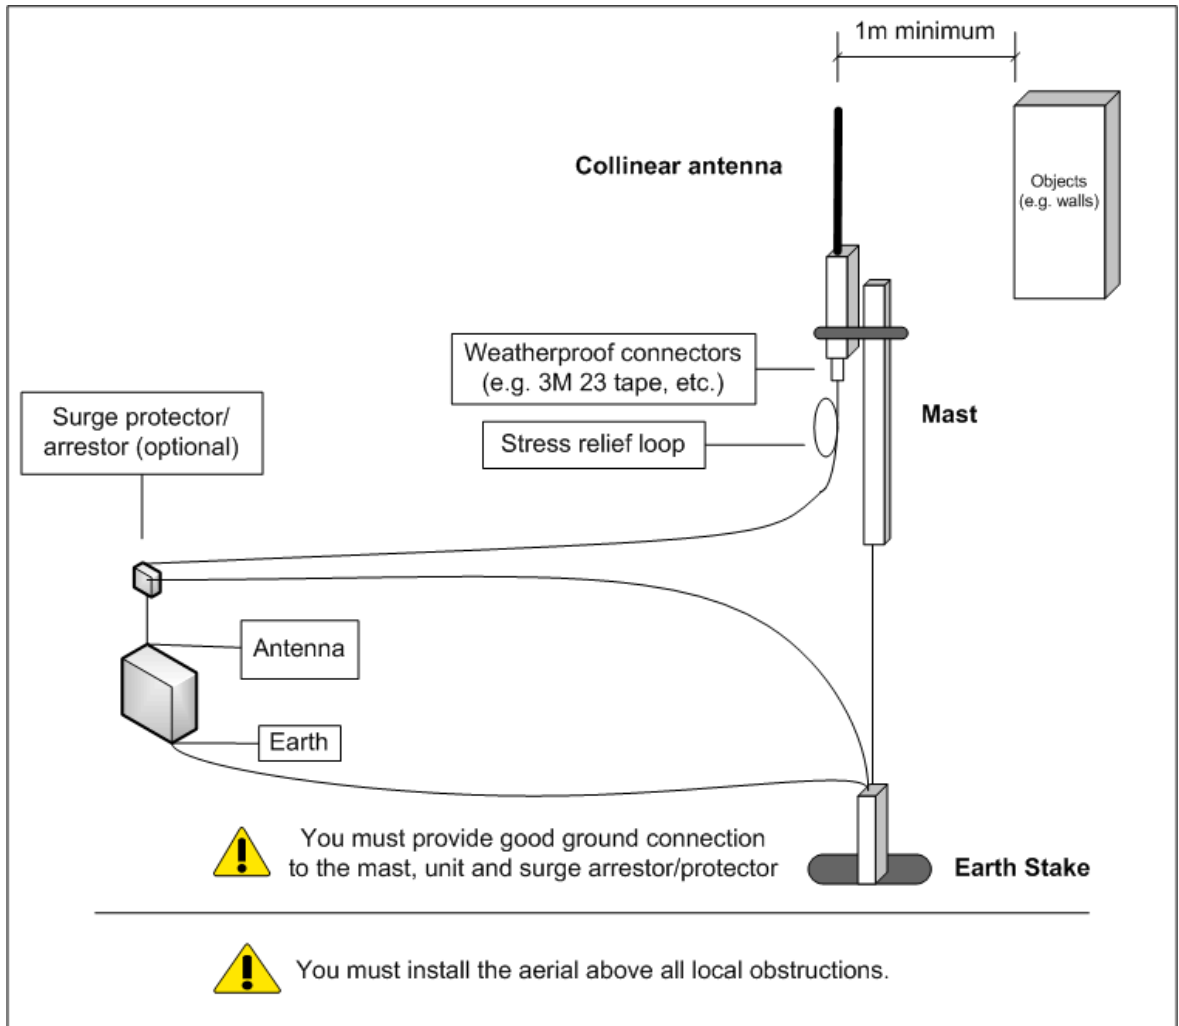

Yagi antennas

Yagi antennas are directional and have positive gain to the front of the antenna and negative gain in other directions. You can use the gain to:

- **Compensate for coaxial cable loss for transmitter unit;** and
- **Increase receive sensitivity for receiver units.**

You should install Yagi antennas with the central beam horizontal and pointed directly in the transmission direction to benefit from the antenna gain.

Note

Yagi antennas usually have a drain hole on the folded element. You should position the drain hole at the bottom when installing the antenna.

You can install Yagi antennas:

- **Vertically polarized** – with the elements in a vertical plane; or
- **Horizontally polarized** – with the elements in a horizontal plane.

The following table shows the recommended installation mode for different situations.

If your installation has ...	Weidmuller Inc. recommends using ...
Two stations both using Yagi antennas	<ul style="list-style-type: none"> • Horizontal polarization for the stations.
Two or more stations communicating with a common station	<ul style="list-style-type: none"> • Vertical polarization for the stations; and • Dipole or collinear (i.e. non-directional) antenna for the central station.

This page intentionally left blank.

Installing the power supply

The unit works with a 9-30 VDC 1 Amp CSA certified Class 2 power supply. For use in Class 1 Div 2 explosive areas, the power supply must be approved for Class 1 Div 2 use.

Warning – explosion hazard

Do not disconnect while circuit is live unless area is known to be non-hazardous.

The following table shows the power supply requirements:

Power supply	WI-I/O 9-L-T	WI-I/O 9-L-R
12V	600 mA	250 mA
24V	300 mA	125 mA

The power supply can be a floating supply or negatively grounded.

The transmitter provides a 24V DC regulated supply for analog loop power. The supply is rated at 35 mA and should ONLY be used for powering analog loops.

To install the power supply:

1. Connect the positive lead to **Power Supply Input**.
2. Connect the negative lead to **Ground**.


Note

To ensure internal surge protection works correctly, you must earth each unit using the Earth terminal.

You should connect the module to the same ground/earth point as the antenna mounting to avoid differences in earth potential during voltage surges.

Do NOT connect the positive side of the supply to Earth.

3. The following diagram illustrates the connection:

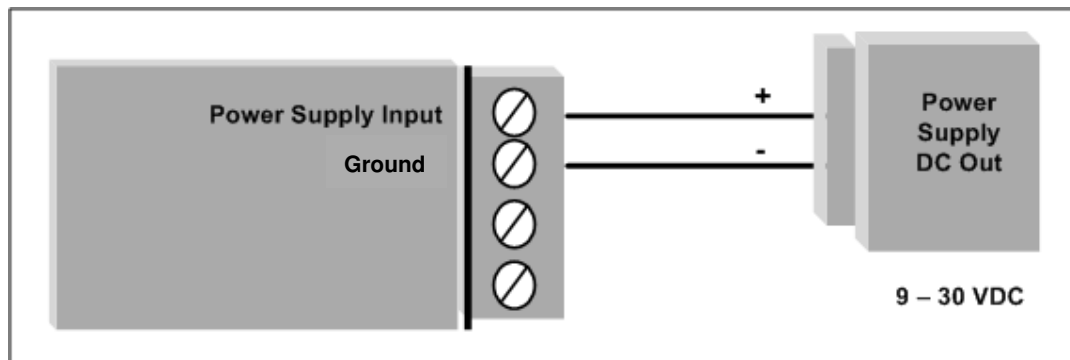

Inputs and outputs

The units have the following inputs and outputs:

Input/output	WI-I/O 9-L-T	WI-I/O 9-L-R	Description	For more information, see ...
Digital inputs	2		Suitable for Voltage free contact, NPN transistor, 0-5V signal.	Digital inputs on page 22.
Relay outputs		3	250VAC 1A / 30VDC 1A.	Relay outputs Important Information on page 23.
Status outputs	2	2	Max 30VDC, 500 mA. Indicate module status, communication failure and local setpoint status.	Status outputs on page 24.
Analog inputs	1		4-20 mA with over-range and under-range. 0-10 mA with over-range.	Analog input on page 25.
+24V Loop supply	1		Provides power for 1 external current loop (up to 35 mA).	Installing the power supply on page 20.
Analogue setpoint	1		Allows discrete setpoint to be controlled from analog input. Threshold adjustable via rotary switch.	Refer to the <i>User Manual</i> .
Thermocouple / millivolt input	1		Provides measurement of E, J, K, T type Thermocouple, millivolt signals and user-defined thermocouple types.	Thermocouple input on page 28
Thermocouple setpoint	1		Lets you control discrete setpoint from thermocouple with threshold adjustable via rotary switch.	Refer to the <i>User Manual</i> .
Pulse inputs	2		Up to 10Hz.	Pulse input on page 29.
Analog output		1	0-22 mA, suitable for loop powered, floating input or single-ended input device.	Analog output on page 30.

For more information, see the next sections.

Digital inputs

The WI-I/O 9-L-T module provides two digital inputs suitable for:

- **Voltage free contacts** – e.g. mechanical switches; or
- **NPN transistor devices** – e.g. electronic proximity switches; or
- **0-5V signals** - 2V – 4V Minimum range.

Note


PNP transistor devices are not suitable.

The unit provides contact wetting current of approximately 5mA to maintain reliable operation of driving relays.

Each digital input is connected between the appropriate **Digital Input** terminal and **Ground**.

Each digital input circuit includes a LED indicator that lights when the digital input is active (i.e. when the input circuit is closed).

To activate the digital input, the switching device resistance must be less than 200 ohms.

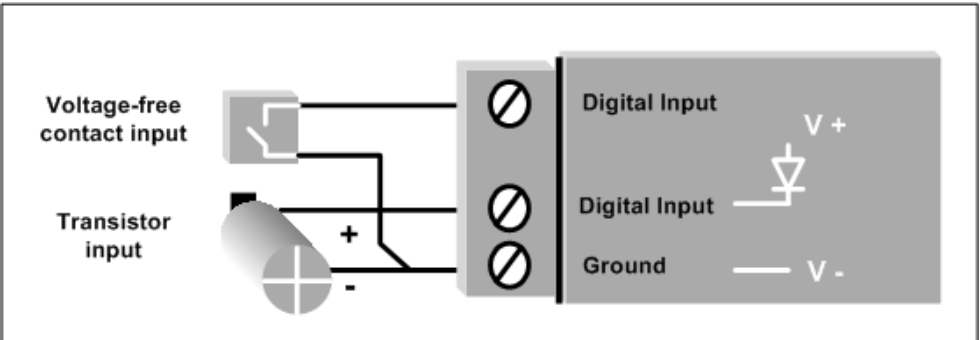Connection method	Example
<p>Voltage free contact</p>	
<p>Active 0-5v signal device</p>	


Relay outputs

The WI-I/O 9-L-R module provides three normally open voltage-free relay contacts rated at 250VAC / 50VDC 1A.


You can use these outputs to directly control low-powered equipment or power larger relays for higher-powered equipment.

For inductive loads, Weidmuller Inc. recommends:

DC relays - use flyback diodes across the external circuit to prevent arcing across the relay contacts.

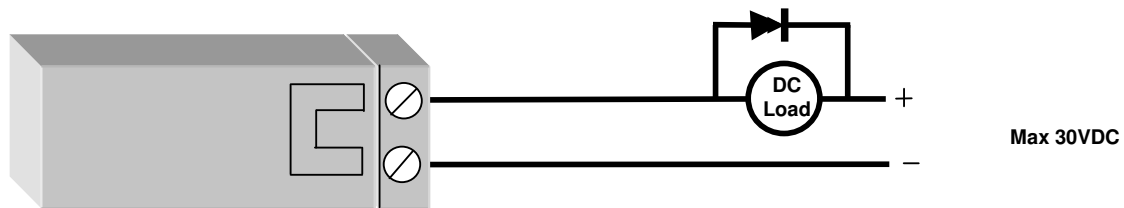

AC relays – use capacitors (e.g. 10nF 250V) to prevent arcing across the relay contacts.

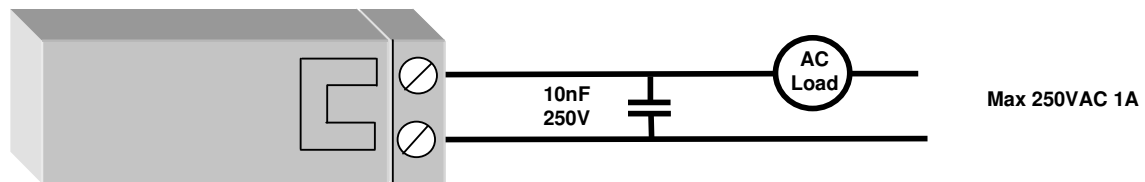

You can individually configure digital outputs to turn off if no command message is received by the output for a certain period. This feature provides an intelligent watchdog for each output, so communications failure at a transmitting site causes the output to revert to a known state.

The output circuit is connected to the appropriate pair of **Digital Output** terminals. Each digital output circuit includes a LED indicator that lights when the digital output is active. The LED flashes if the watchdog alarm is active.

IMPORTANT SAFETY INFORMATION

In order to comply with Electrical Safety Standards, when connecting SELV **AND** voltages which are greater than SELV (30VAC or 60VDC) together, then Relay Output 2 must **NOT** be used in order to provide sufficient isolation between the outputs


Status outputs

The unit contains the following status outputs:

- **System OK;**
- **Setpoint Output;** and
- **Communications Failure.**

Status outputs are FET output to common rated at 30VDC 500 mA.

Connect the output circuit to the appropriate Status **Output** terminal. Each status output circuit is associated with an LED indicator that lights lit when the digital output is active.

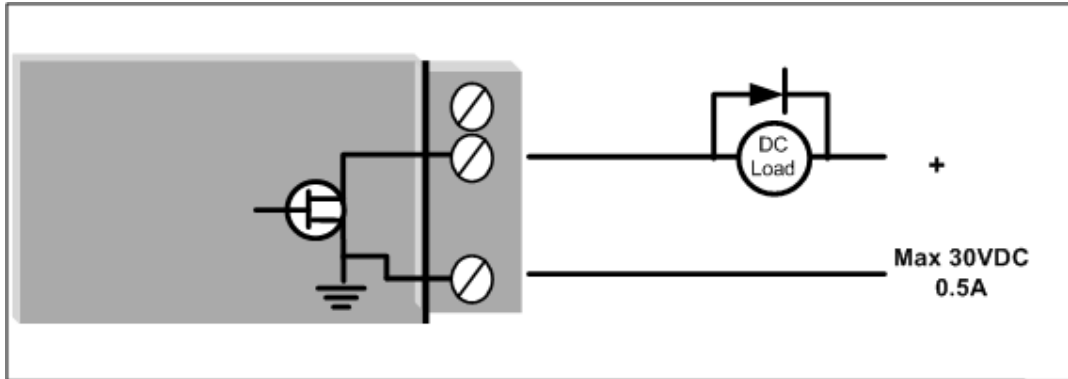

The following table details the status output behavior:

Status output	LED	LED status	Description
System OK active (both modules)	OK	Green	No fault detected
System OK inactive	OK	Red	<ul style="list-style-type: none"> • Internal fault detected. • Supply voltage Low • Analog Loop supply overloaded
Setpoint Output (WI-I/O 9-L-T)	SP	Green	Local setpoint attached to 4-20mA analog input.
Communications Failure (WI-I/O 9-L-R)	CF	Red	Watchdog alarms active on digital outputs or analog outputs.

Analog input

The WI-I/O 9-L-T module provides one 0 - 20 mA DC analog input for connecting to instrument transducers (e.g. level, moisture, pressure transducers, etc.).

Note

The WI-I/O 9-L-T module inputs measure down to 0mA and can also be used for zero based signals (e.g. 0 - 10 mA).

The analog input has a positive and negative terminal and can be placed at any point in the current loop, providing neither input rises above the 24 volt **Analog Loop Supply** level.

Each input has a loop resistance of less than 250 ohms and zener diode protection is provided against over-voltage and reverse voltage.

Note

You may require additional protection in high voltage or noisy environments or for long wiring runs.

A 24VDC loop supply is available on the WI-I/O 9-L-T module for powering the analog transducer loops. In this situation, connect the:

- **Analog loop** - between an **Analog Input (-)** terminal and **Ground**.
- **Positive terminal** – i.e. **Analog Input (+)** to the +24V **Analog Loop Supply**.

Externally powered loops may be connected by connecting the input between "Analog Input (+)" and "Analog Input (-)" Common mode voltage may be -0.5V to 27V.




Weidmuller Inc. recommends using shielded cable for analog I/O loops to minimize induced noise and Radio Frequency Interference (RFI).


Note

You should only connect one end of the cable shield to Earth

To connect an analog signal from a PLC or DCS output to an analog input on the WI-I/O 9-L-T, you must carefully check the internal circuit of the output as different devices use different ways to create an analog signal.

The following diagrams illustrate different connection methods:

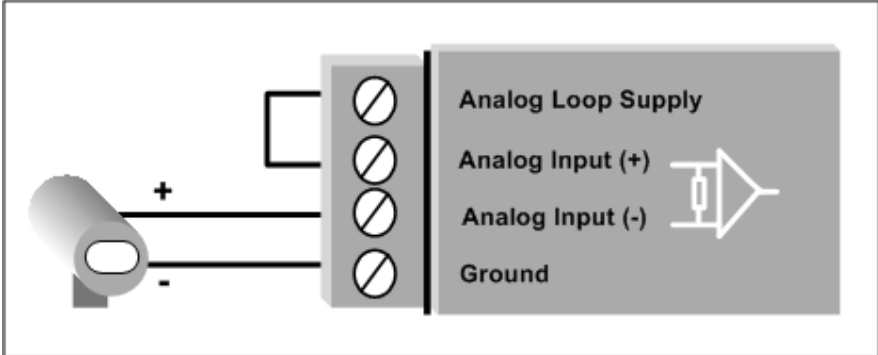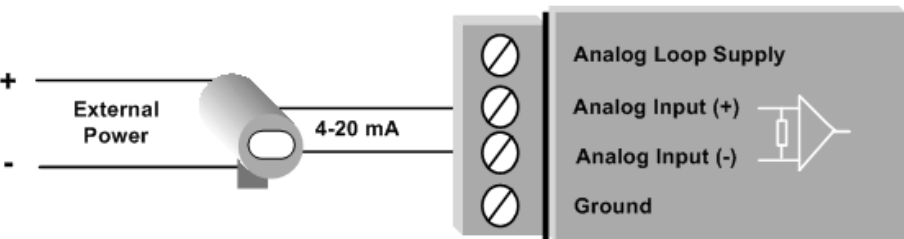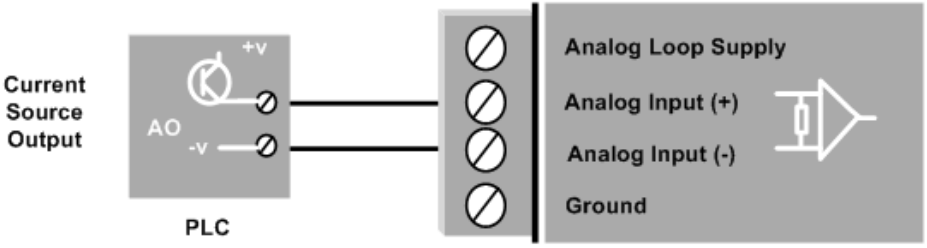Analog signal source	Example
<p>2 wire transducer</p>	
<p>4 wire transducer</p>	 <div data-bbox="500 1003 1339 1150" style="border: 1px solid black; border-radius: 10px; padding: 5px;"> <p>Note Analog input must be within 27V of Ground. If your terminal voltage exceeds this, you must use a loop isolator.</p> </div>
<p>Current source output</p>	 <div data-bbox="506 1558 1453 1747" style="border: 1px solid black; border-radius: 10px; padding: 5px;"> <p>Note</p> <ol style="list-style-type: none"> 1. Analog input must be within 27V of Ground. If your terminal voltage exceeds this, you must use a loop isolator. 2. Ground is connected to ground/earth. If you cannot ground the PLC COM, you must use a loop isolator. </div>

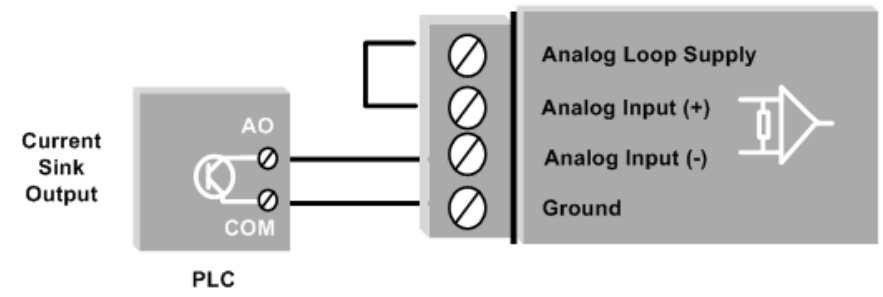
Analog signal source	Example
Current sink output	 <p data-bbox="548 659 1409 772"> Note 1. Ground is connected internally to Earth. If you cannot ground the PLC COM, you must use a loop isolator. </p>

Thermocouple input

The WI-I/O 9-L-T provides one input suitable for connection to a thermocouple or a millivolt level signal. The module provides linearization tables for J, K and T type thermocouples and also supports other types via a user linearization table.

Millivolt signals in the range -10mV to +100 mV are supported.

For more information on configuring the thermocouple input and cold-junction compensation to suit your application, refer to the **User Manual**.

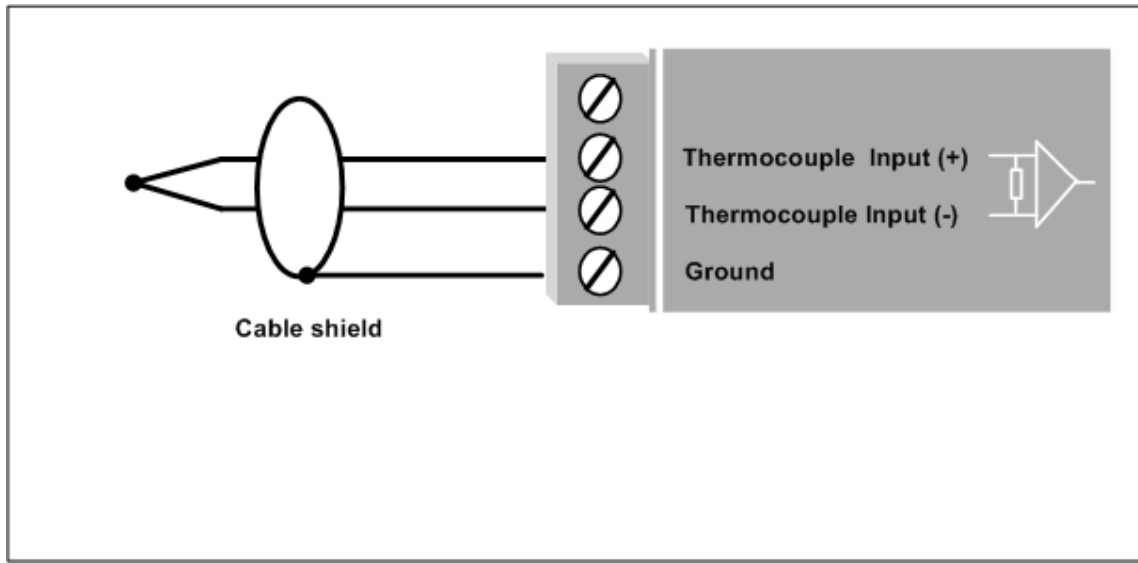

Pulse input

The WI-I/O 9-L-T module lets you configure the digital inputs as pulse inputs with the following characteristics:



Characteristic	Value
Maximum rate	10 Hz
Minimum off time	20 mSec
Minimum on time	20 mSec

Using this mode, you can map the pulse count to a remote output by re-generating as a Pulse Output on WI-I/O 9-1 or Digital Output on a WI-I/O 9-3 unit.

Note

You should connect the pulse input in the same way as a digital input.

The following diagrams illustrate different connection methods:

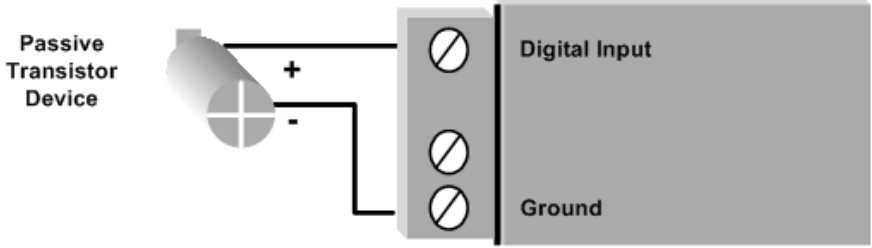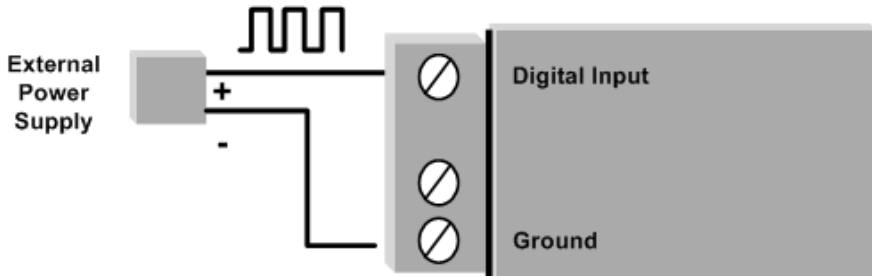Connection method	Example
Passive transistor	 <p>The diagram shows a 'Passive Transistor Device' with two terminals labeled '+' and '-'. The '+' terminal is connected to a terminal on a panel labeled 'Digital Input'. The '-' terminal is connected to a terminal on the same panel labeled 'Ground'. There are three terminals in total on the panel, with the middle one being unoccupied.</p>
Active pulse device	 <p>The diagram shows an 'External Power Supply' with two terminals labeled '+' and '-'. The '+' terminal is connected to a terminal on a panel labeled 'Digital Input'. The '-' terminal is connected to a terminal on the same panel labeled 'Ground'. A square wave pulse waveform is shown above the connection. There are three terminals in total on the panel, with the middle one being unoccupied.</p> <div style="border: 1px solid black; border-radius: 15px; padding: 10px; margin-top: 10px;"> <p>Note Use a solid state relay if the voltage range is not suitable. Voltage Range is low: 2V (max); high: 4V (min).</p> </div>

Analog output

The WI-I/O 9-L-R module provides a 4 - 20 mA DC analog output for connecting to instrument indicators to display remote analog measurements. The analog output is a current source provided from an internally generated +24V loop supply.



When connecting to an external device (e.g. electronic indicator, recorder, PLC / DCS input, etc.) by connecting the output between the **Analog Output** terminal (+) and the **COM** terminal (-).

Note

Zener protection of analog outputs provides protection against short periods of over-voltage; however longer periods may result in module damage.

You can also individually configure analog outputs to turn off (i.e. 0 mA) if no command message is received to the output for a certain period.

The following diagrams illustrate different connection methods:

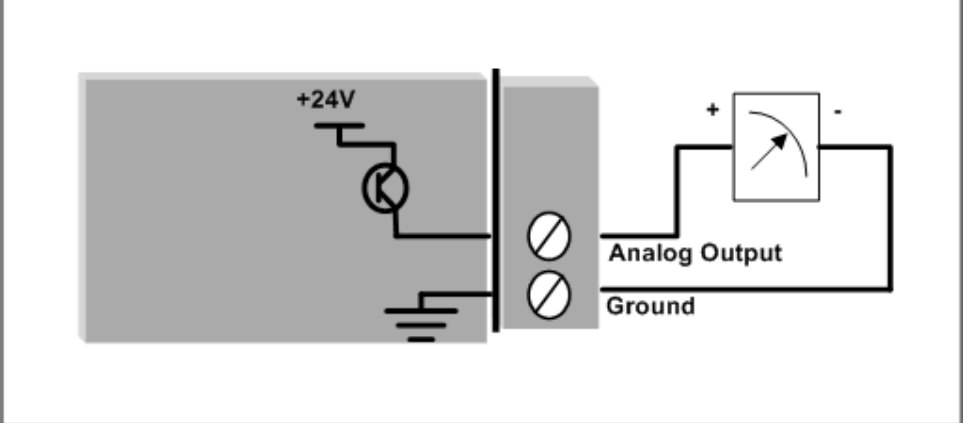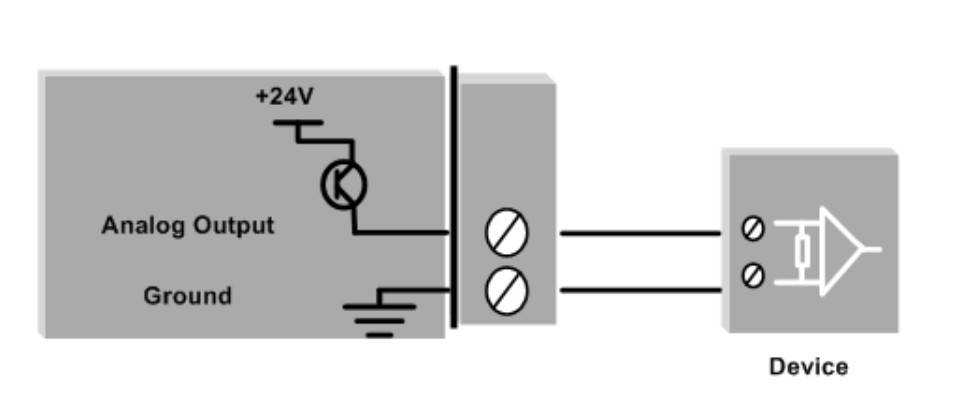Connection method	Example
<p>Loop powered device</p>	
<p>Floating input device</p>	

Connection method	Example
<p>To single-ended input device</p>	<p>The diagram illustrates a single-ended connection. On the left, a gray box represents the 'Analog Output' module. It features a '+24V' supply terminal with a resistor symbol and a 'Ground' terminal with a ground symbol. A vertical line separates this module from a central terminal block with two terminals. Two wires connect these terminals to a 'Device' on the right. The device has two input terminals, each with a ground symbol, and a large white arrow pointing to the right.</p>

Installing and configuring the unit

This section describes how to install and configure your unit and contains the following sections:

Section	Description	For more information, see ...
Installing the unit	Describes how to physically install your unit.	Installing the unit on page 33.
Configuring your unit	Describes the different ways to configure your unit.	Configuring your units on page 34.
Testing your unit	Describes Weidmuller Inc.' recommendations for testing your unit.	Testing your units on page 35.

For more information, see the next sections.

Installing the unit

To install the unit:

1. Connect signals to the supplied terminals.
2. Connect the radio antenna.
3. Install DIN rail to mount the module.
4. Clip the module to the DIN rail:

You can now configure your unit. For more information, Configuring your units on page 34.

Configuring your units

You can configure your network using:

- **Default factory configuration** – that lets you easily setup your network as a simple send/receive; or
- **User-defined customized configuration** – that lets you set specific information about your network and allows communication with other Weidmuller Inc. WI-I/O 9-x series devices.

For more information on setting a user-defined customised configuration, see the **User Manual**.

For more information on setting the factory default configuration, refer to the **Quick Start Guide** included with your module.

The following table details the factory default configuration:

Signals sent over radio		
WI-I/O 9-L-T(Transmitter)	Sends	WI-I/O 9-L-R (Receiver)
Digital Input 1	⇒	Digital Output 1
Digital Input 2	⇒	Digital Output 2
Analog Setpoint	⇒	Digital Output 3
Analog input (4-20 mA)	⇒	Analog output

Other signals	
WI-I/O 9-L-T(Transmitter)	WI-I/O 9-L-R (Receiver)
Thermocouple Input (Not used)	Communication Failure (Comes on if no messages from WI-I/O 9-L-T)
Setpoint Output (Local indication)	
System OK (On if system OK)	System OK (On if system OK)

Testing your units

We recommend you bench test the complete system before installing a new system.

Configuration problems are easier to identify and fix when the units are next to each other.

The following table describes common problems and recommended solutions:

If your installation has ...	You should check ...	Weidmuller Inc. recommends ...
Poor radio channel communications <ul style="list-style-type: none"> TX LED flashes but no RX LED Output LEDs flash quickly 	<ul style="list-style-type: none"> The antenna installation. For radio interference on the same channel. The radio path is adequate. 	<ul style="list-style-type: none"> Higher performance antennas if the path is too long. Higher mounting points to overcome obstructions. Using an intermediate unit as a repeater.
Red OK LED	<ul style="list-style-type: none"> Power Supply voltage 	<ul style="list-style-type: none"> Supply should be between 9 and 30VDC.
	<ul style="list-style-type: none"> Analog loop supply current 	<ul style="list-style-type: none"> The analog loop supply is rated for 35 mA max.
	<ul style="list-style-type: none"> Module configuration 	<ul style="list-style-type: none"> Your module configuration may be invalid. Re-load or restore factory default configuration.
TX LED flashes but no RX LED (bench testing)	<ul style="list-style-type: none"> Ensure the WI-I/O 9-L-R is set to the same country and frequency band as the WI-I/O 9-L-T 	<ul style="list-style-type: none"> Register the receiver with the transmitter. (Refer to the Quick Start Guide)
RX LED Flashes but no outputs change	<ul style="list-style-type: none"> For a user-defined customized configuration, - check the configuration. 	<ul style="list-style-type: none"> Check the configuration and re-program the modules.
	<ul style="list-style-type: none"> For default configuration, check the receiver is registered with the transmitter. 	<ul style="list-style-type: none"> Repeat the procedure to register the receiver with the transmitter.

For support for other testing issues, please contact Weidmuller Inc..

Unit specifications

This section details the specifications for each unit.

Transmitter unit

Input/output	Number	Additional information
Digital inputs	2	Dry-contact digital inputs slow-pulsed at 10Hz. All inputs are suitable for voltage free contacts (e.g. mechanical switches) or NPN transistor devices (e.g. electronic proximity switches). NOTE: PNP transistor device inputs are NOT suitable.
Status outputs	2	Separate System OK and Setpoint Status
Analog inputs	1	0-20mA differential input; 16-bit resolution, 0.1% accuracy, 10 ohm input impedance.
Thermocouple inputs	1	J, K or T type thermocouple with on-board cold-junction compensation. Cold junction compensation accuracy $\pm 1^\circ$ over ambient temp range: -40° to $+70^\circ\text{C}$.
Power supply	1	9-30 VDC 1 Amp CSA certified Class 2 power supply. For use in Class 1 Div 2 explosive areas, the power supply must be approved for Class 1 Div 2 use. WARNING: Explosion hazard - do not disconnect while circuit is live unless area is known to be non-hazardous.
Transmitter	1	1-Watt Frequency Hopping Spread Spectrum (FHSS) Transmitter.
Frequency	902-928 MHz	Actual frequency range depends on country.

Receiver unit

Input/output	Number	Additional information
Digital outputs	3	Voltage-free contacts rated at 250 VAC, 1A, 30VDC 1A 2 for digital inputs and 1 for setpoint.
Status outputs	2	Separate System OK and communication failure output.
Analog output	1	16-bit resolution, 0.1% accuracy, single-ended source output.
Power supply	1	9-30 VDC 1 Amp CSA certified Class 2 power supply. For use in Class 1 Div 2 explosive areas, the power supply must be approved for Class 1 Div 2 use. WARNING: Explosion hazard - do not disconnect while circuit is live unless area is known to be non-hazardous.
Radio receiver	1	High sensitivity FHSS UHF radio receiver.
Frequency	902 – 928 MHz	Actual frequency range depends on country.
Sensitivity	-110 dBm	At PER 8%.

Ancillary hardware reference information

This section contains reference information about additional hardware components you may need for your unit.

RS232 serial cable

You can connect the unit to a PC using an RS-232 serial cable to:

- **Transfer configuration information;**
- **Perform factory and field-testing.**

The serial port is an 8 pin RJ-45 plug that communicates using standard RS-232 signals:

Signal information	Value
Baud rate	9600
Bits	8 bits with 1 stop bit
Parity	No parity

Weidmuller Inc. supplies a green configuration cable wired to the following pin-out:

Note

The following pin-out information is for reference only.

RJ-45	Required	Signal name	Normal colour	DB9
1		Ring Indicator	Green / White	9
2		Data Carrier Detect	Green	1
3	Y	Data Terminal Ready	Orange / White	4
4	Y	Signal Common	Blue	5
5	Y	Receive Data (from Modem)	Blue / White	2
6	Y	Transmit Data (to Modem)	Orange	3
7		Clear to Send	Brown / White	8
8		Request to Send	Brown	7

Index

2 wire transducer	29	lightening rod	18
4 wire transducer	29	lightening strike.....	18
AC relays	26	line of sight	16
active pulse device	See	linearization tables.....	31
active signal device	25	loop powered device.....	33
analog input	28	maximum transmission distance.....	16
analog output.....	33	mechanical switches.....	25
antennas	19	millivolt signal	31
compatible cables	13	net gain.....	15
dipole	19	obstructions	16
installing	16	intermediate	16
polarization.....	21	over-voltage.....	28
supported antennas	13	passive transistor.....	32
arcing.....	26	pin-out.....	40
bench testing	38	PLC	28
cable		polarization	21
loss.....	15	polarized	21
cables		power supply	23
for antennas	13	installing	23
supported cables.....	13	problems.....	38
WI-ANT-DPL-0-16	13	pulse input	32
coaxial surge diverter	18	PVC tape	18
configuration		Radio Frequency Interference	28
default factory.....	37	receiver	
user-defined customized	37	components.....	11
configuring	37	front panel	12
connections		LEDs	12
taping	18	terminal connections	11
current sink output	30	relay outputs	26
current source output.....	29	reliable path.....	16
DC relays.....	26	repeater	16
DCS.....	28	reverse voltage	28
digital inputs.....	25	RFI.....	28
DIN rail	36	RJ-45	40
dipole antennas	19	rotary switch	9
electronic proximity switches	25	changing position	9
explosive areas.....	23	setpoint levels	9
floating input device.....	33	RS-232	40
flyback diodes.....	26	serial cable	40
gain		setpoint	
net gain	15	thermocouple	24
horizontal polarization.....	21	setpoint levels.....	9
installing	36	WI-ANT-CLR-900-8-54	13, 14
instrument transducers	28	WI-ANT-CLR-900-5-32	13
interference.....	16	shielding	18
internal surge protection	23	signals	37
LEDs		single-ended input device.....	34
receiver	12	SMA connector.....	18
transmitter	10	solutions	38

specifications	39	transmitter	
status outputs	27	components.....	8
surge diverter.....	18	front panel	9
surge protection.....	18	terminal connections	8
surge suppression	18	UV-stabilized tape	18
switches		vertical polarization.....	21
electronic proximity	25	voltage free contact	25
switches		vulcanising tape.....	18
mechanical	25	watchdog alarm	26
taping connections.....	18	WI-ANT-DEMO-900.....	13
testing.....	38	WI-ANT-YGI-15-16.....	13, 14
thermocouple.....	31	WI-ANT-YGI-10-6.....	13, 14
thermocouple setpoint	24	zener diode protection	28
transducers.....	28	zero based signals.....	28